
 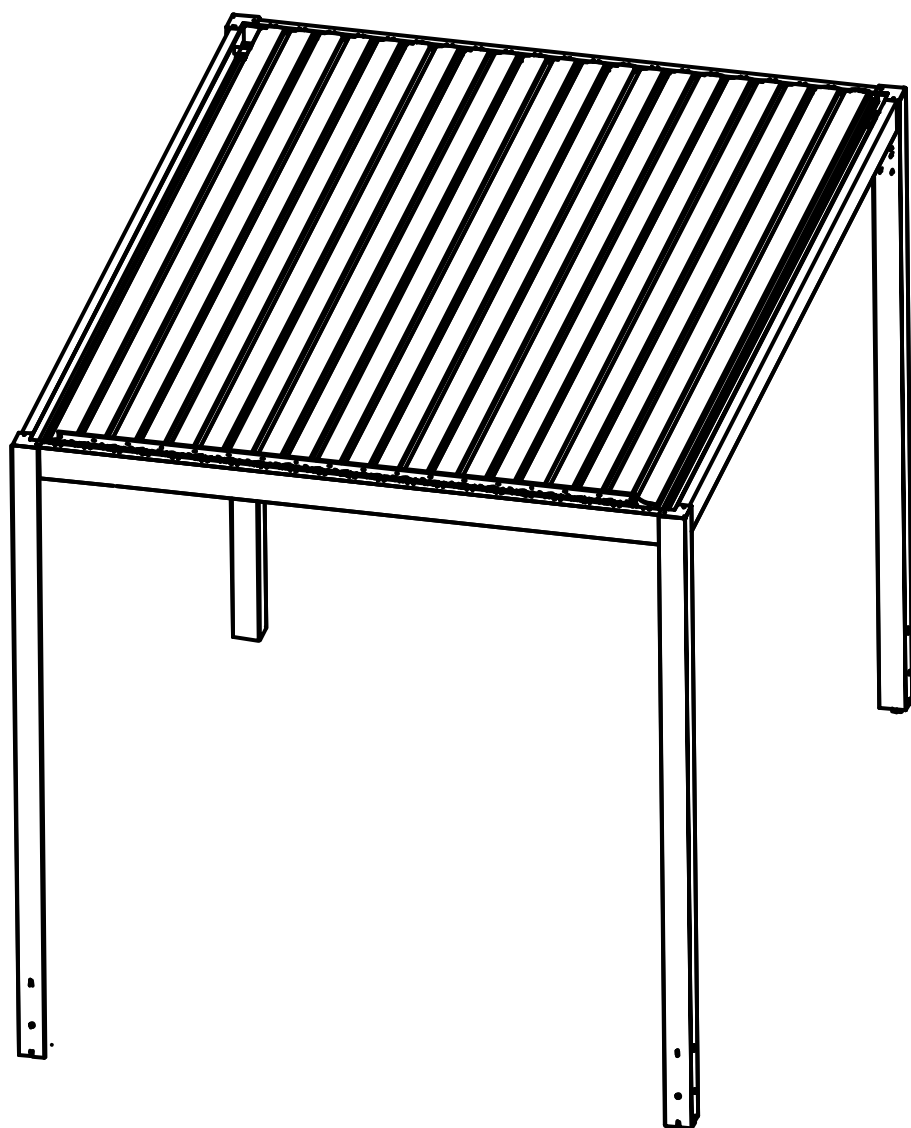
 
 
 
 




INSTALLATION DIAGRAM




Up Beam Part	
Down Beam Part	
Left & Right Beam Part	
Up Beam Cover 1	
Up Beam Cover 2	
Up Beam Cover 3	
Connection Rod	
Connect Hand Crank Louver	
Standard Louver	
Post	
Post Decoration Cover	

Phillips pan head self-tapping screw	
Phillips countersunk head self-tapping screw	
Hexagon countersunk head screw	
Hexagon pan head screws	
Hexagon pan head screws	
Connection Rod Screws	
Louver and hand crank connection screw	
Motor base	
Motor	
Gutter reinforcement plate	


Column Accessories Installation

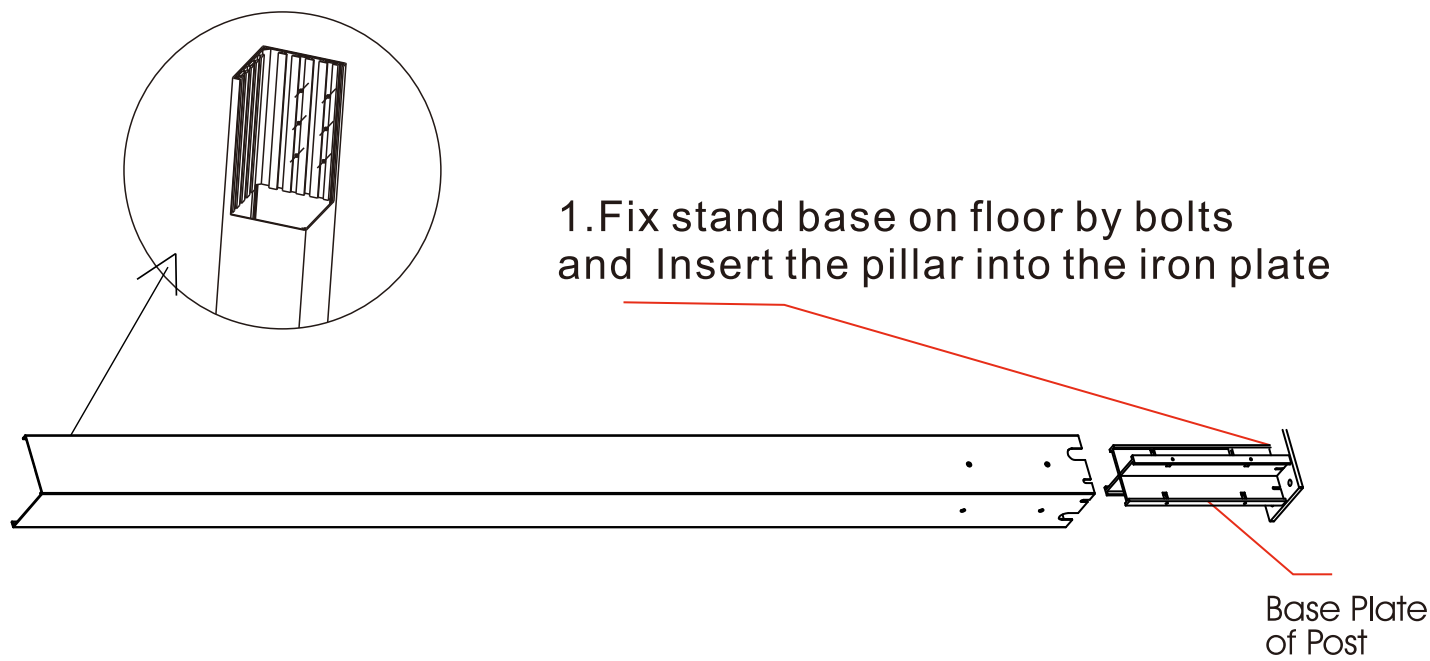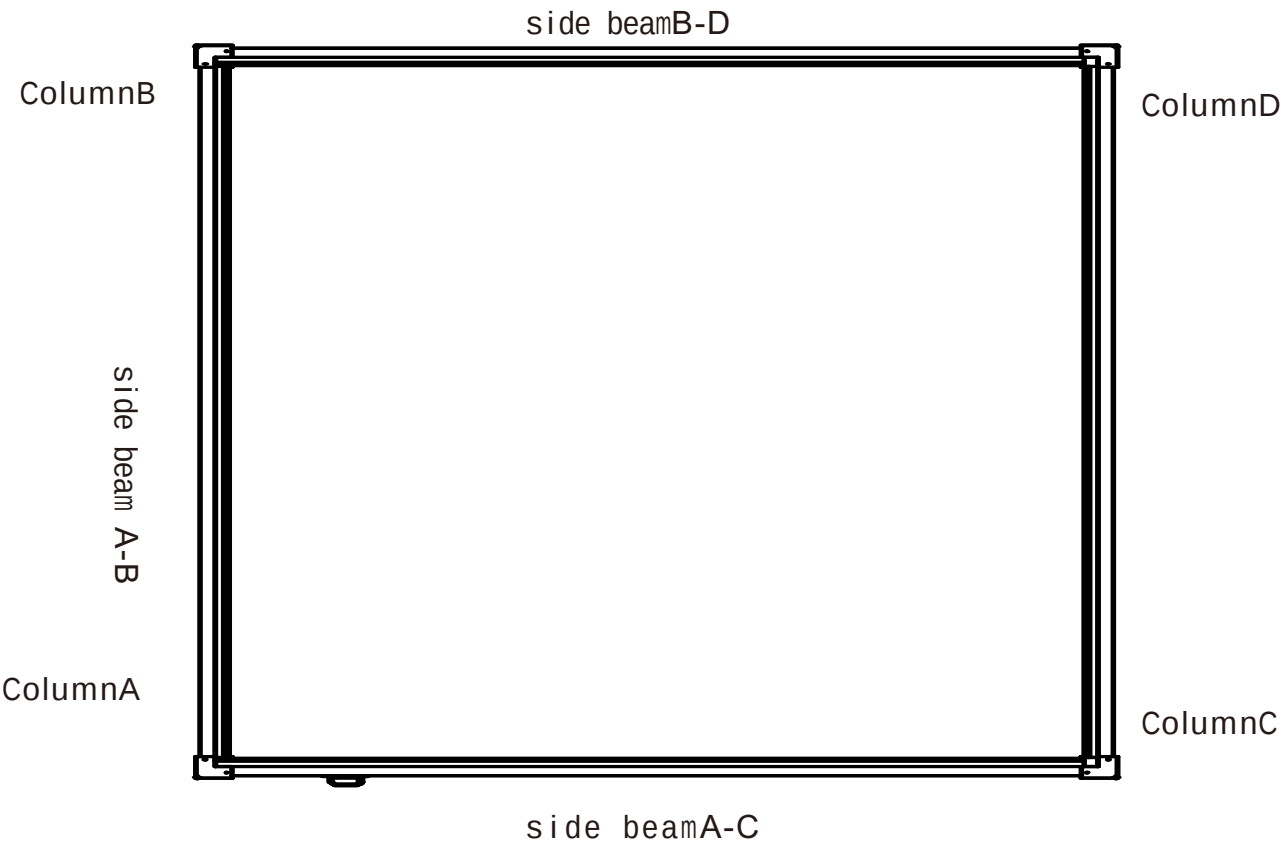


Column Accessories Installation

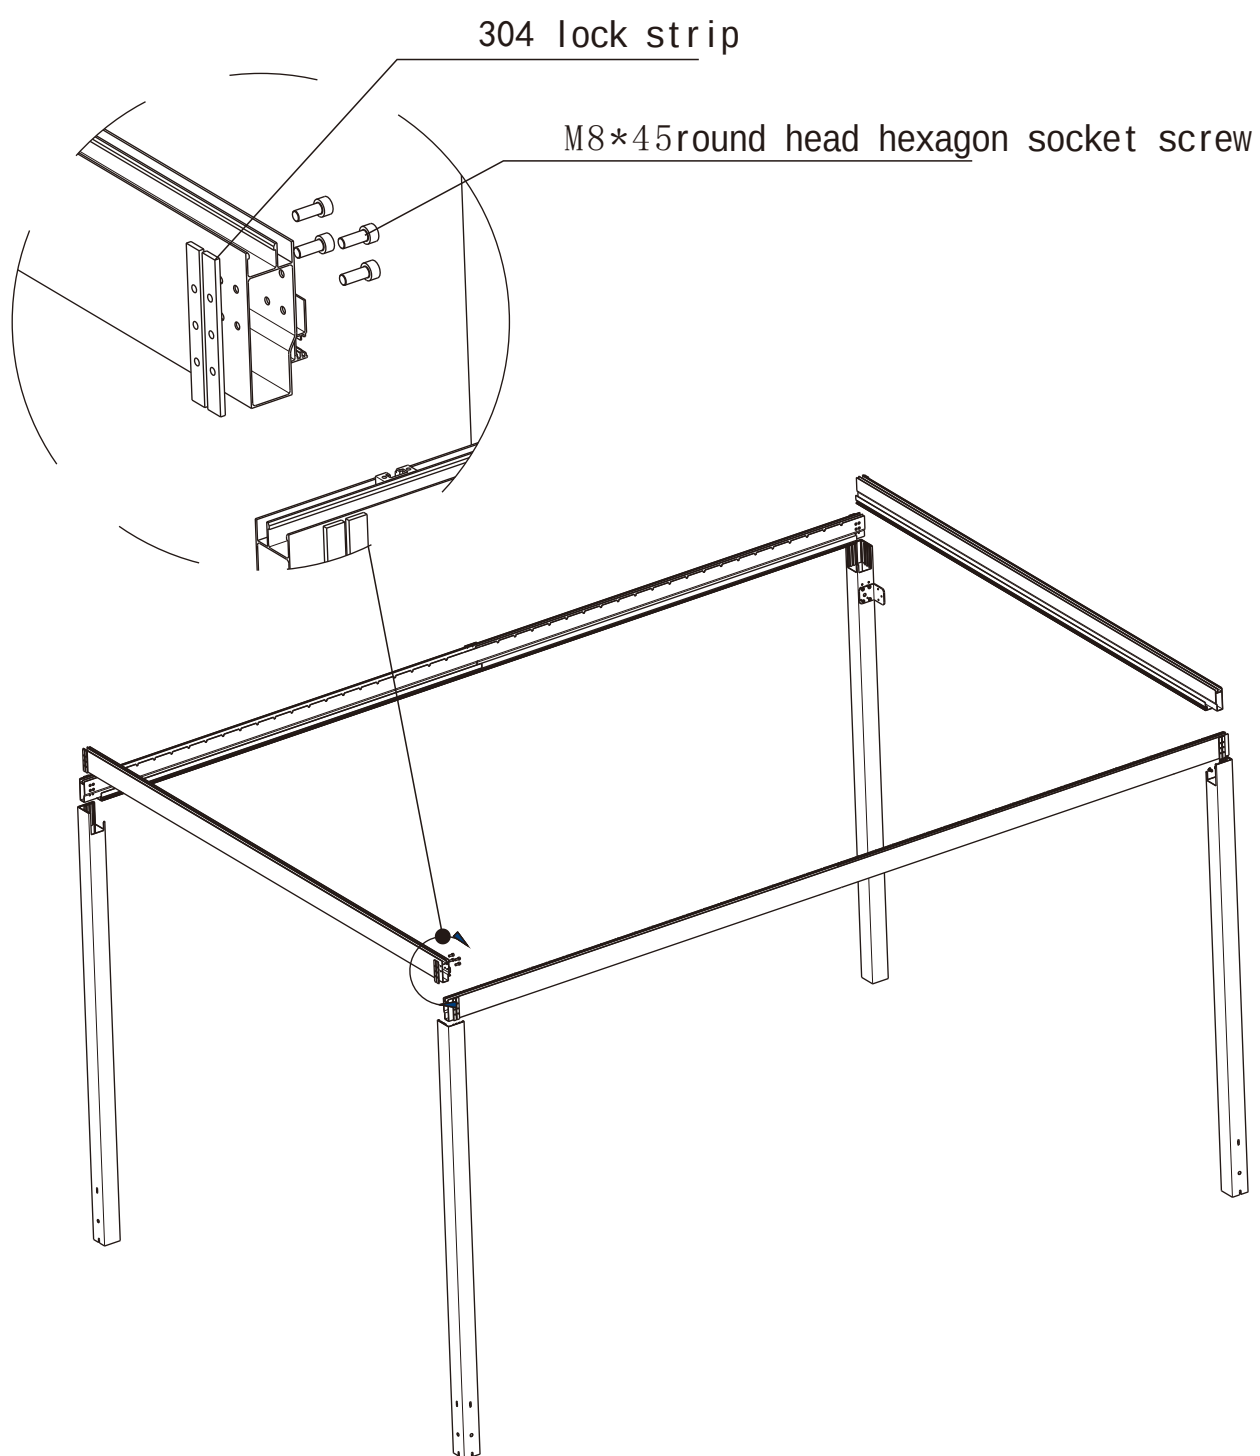

Installation of Louver Installation

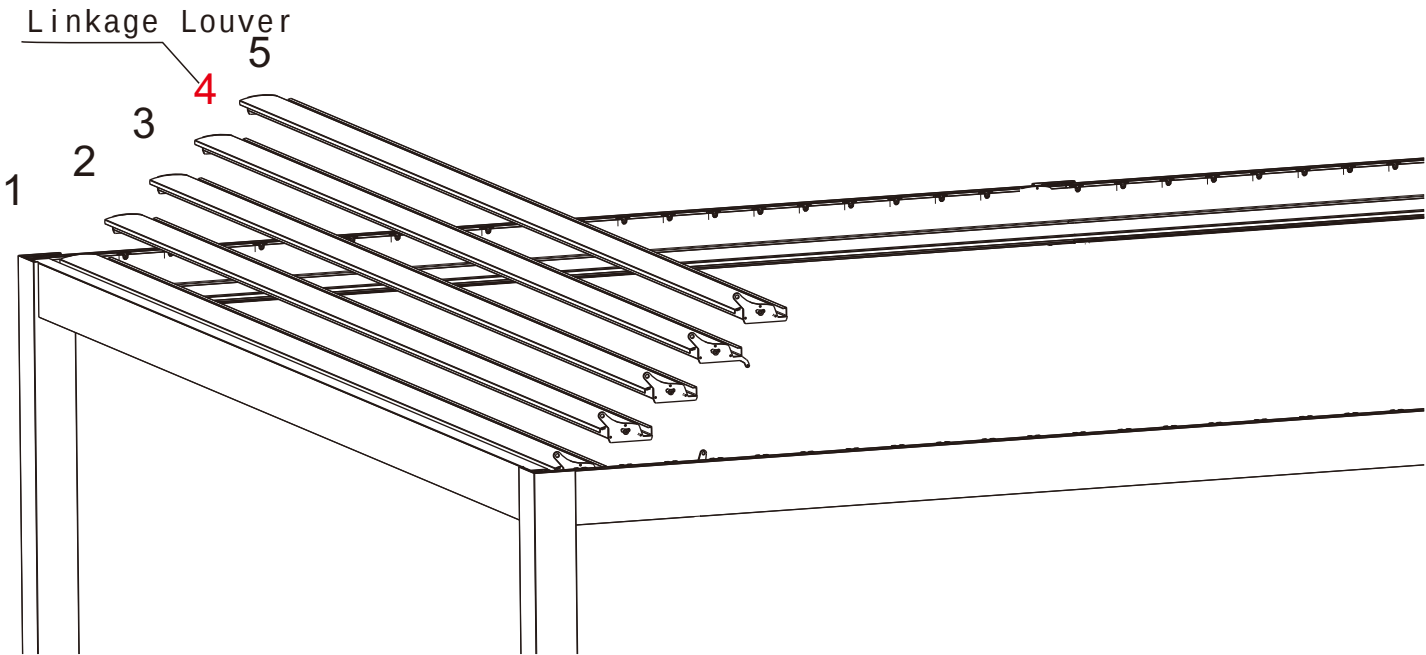

Linkage Bar Installation Instructions

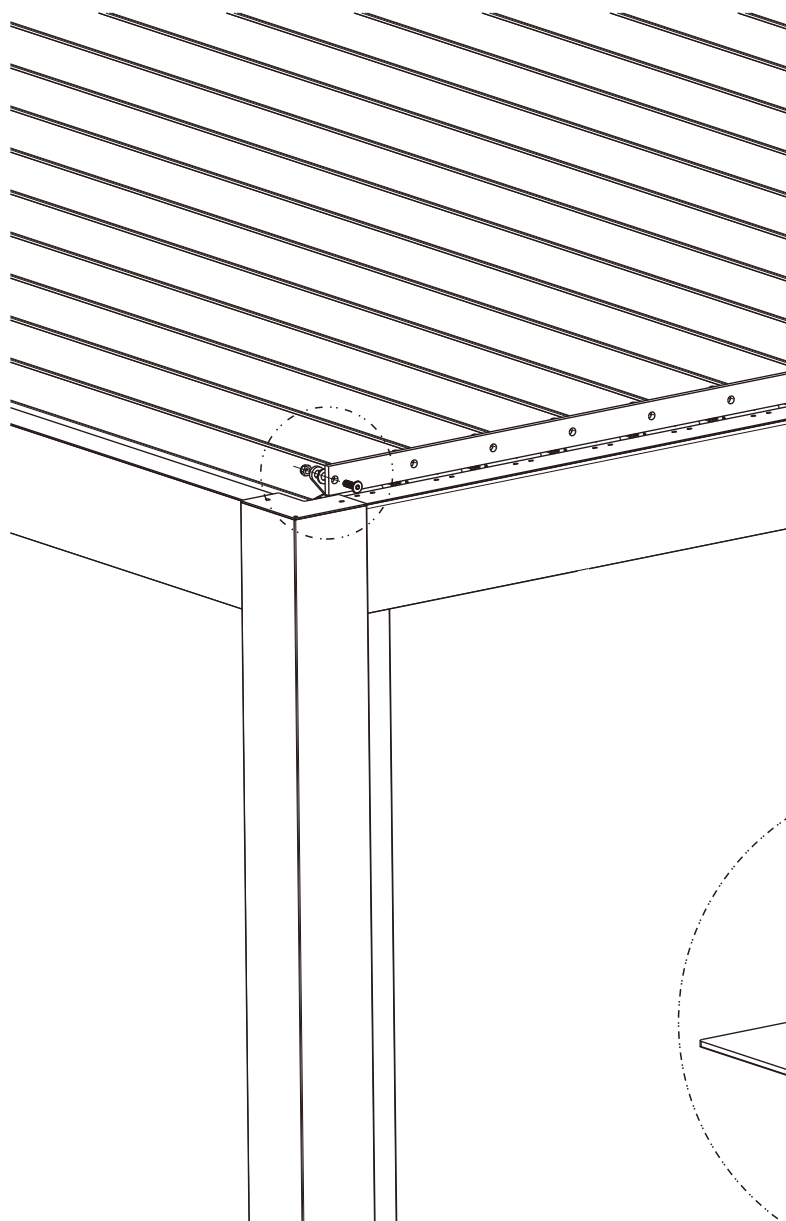

Linkage Bar

