

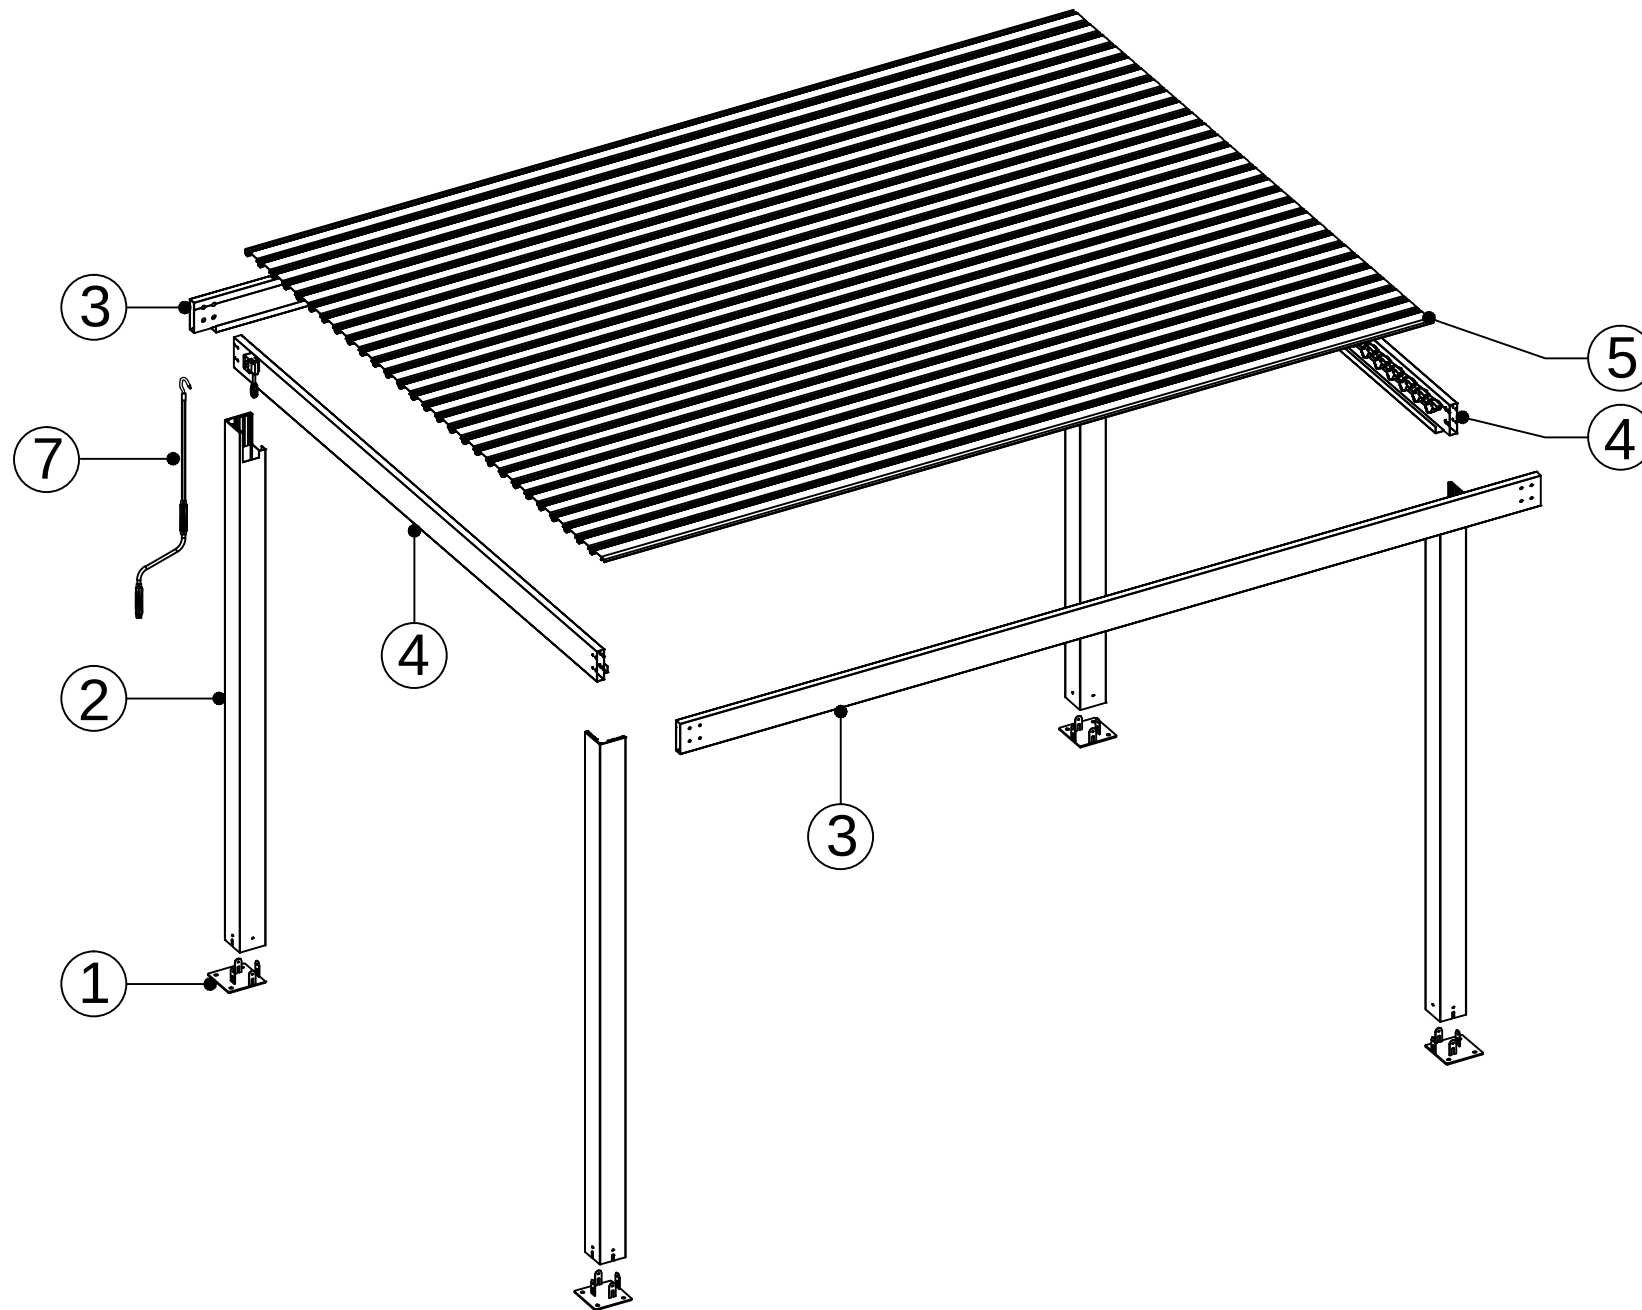


3x3m Aluminum louvre pergola installation

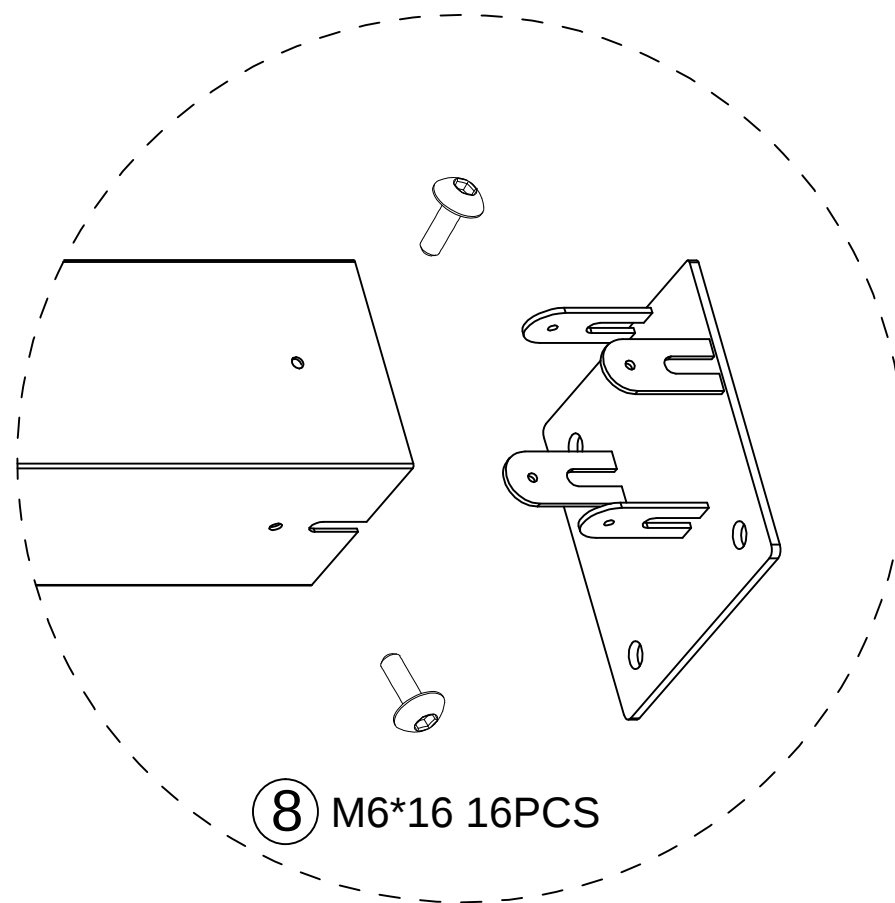



No.	Photo	QTY
1		4
2		4
3		2
4		2
5		28
6		4
7		1
8		16
9		16
10		12
11		56
12		12
13		1
14		1
15		1
16		1

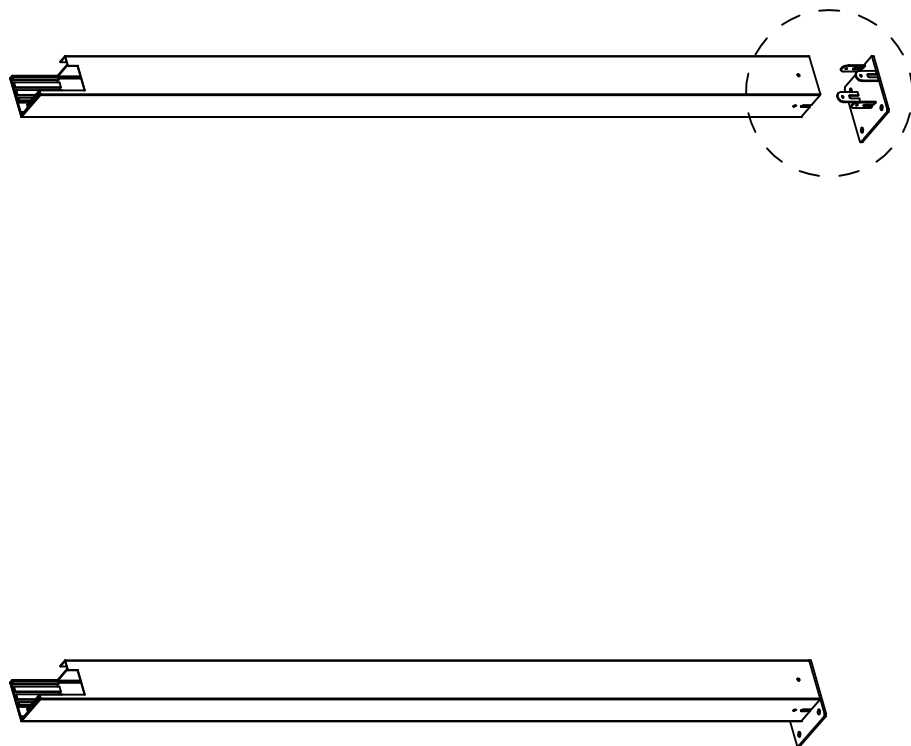

⑧ M6*16 16PCS

Step 1


Attach base plate No.1 to the bottom of pole No.2, use bolts (M6*16mm) with hex key or electric drill.

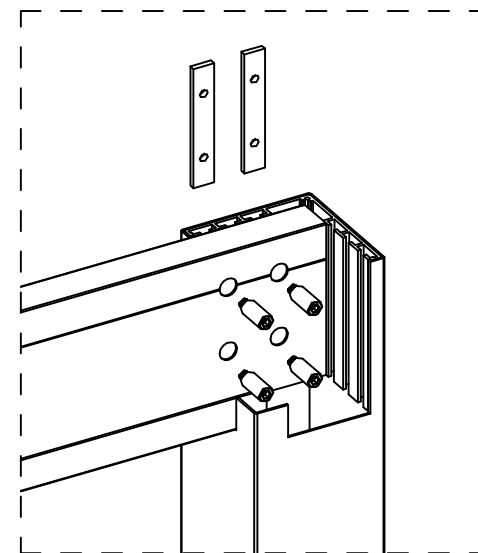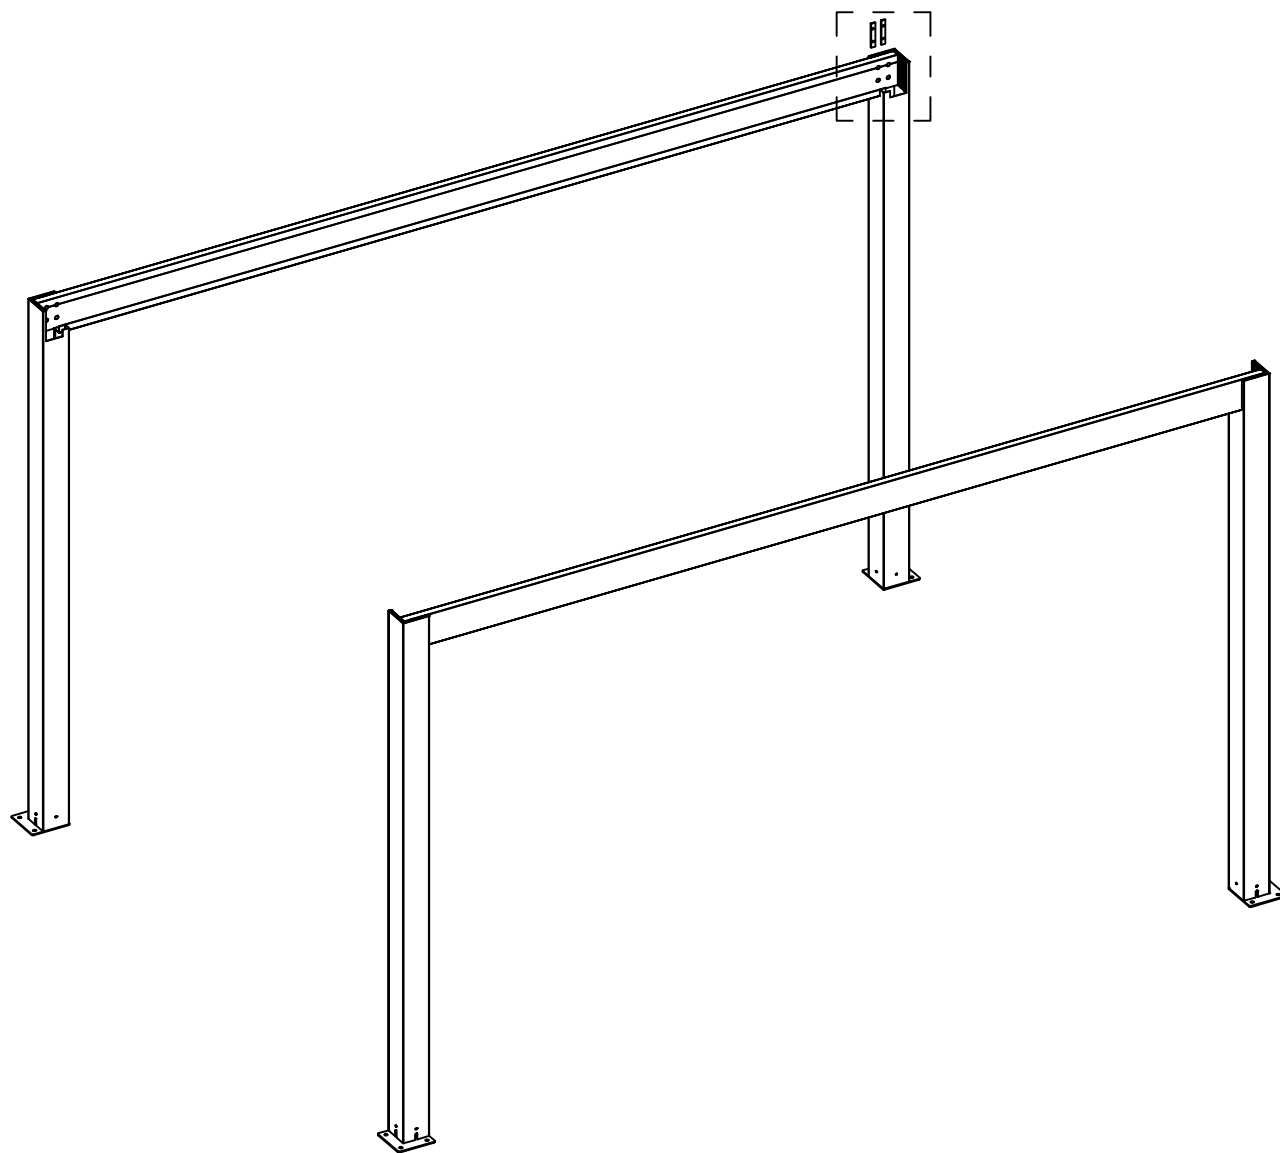

⑨ M8*14.5*34 16PCS

Step 2



Attach beam No.3 to the top of pole, use bolts (M8*14.5*34mm) to fasten.

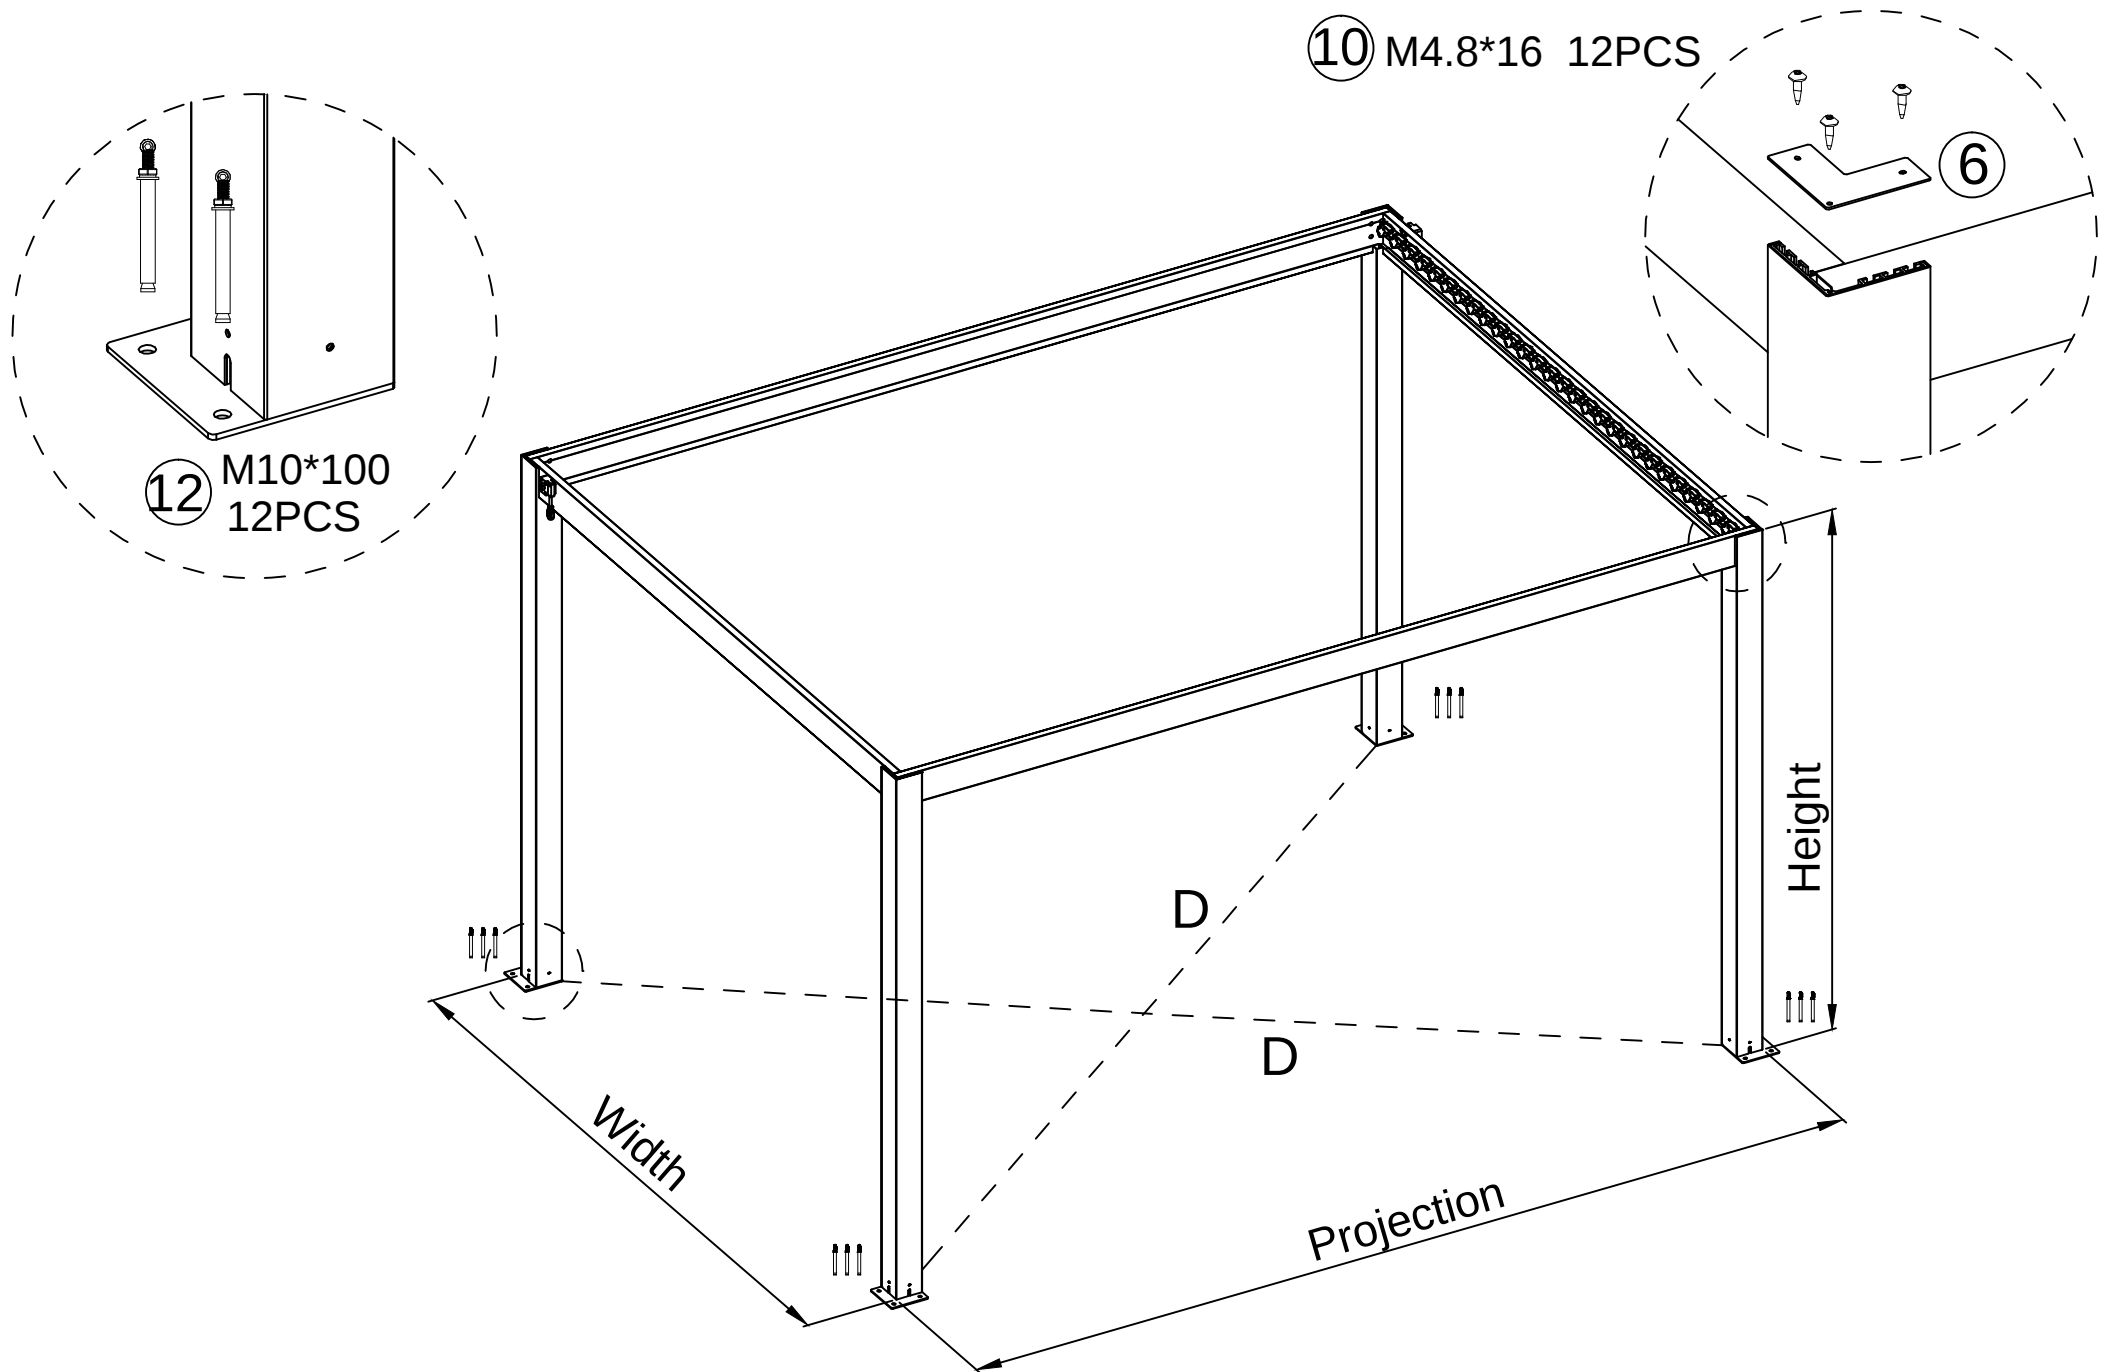

Step 3


Attach beam No.4 on the top of pole, use bolts(M8*14.5*34mm) to fasten. Attach top cover, use bolts to fasten. Attach poles according to the size, mark holes for expansion bolts on each pole. Insert bolts (M10*100) to tighten.

⑪ M3.5*16 56PCS

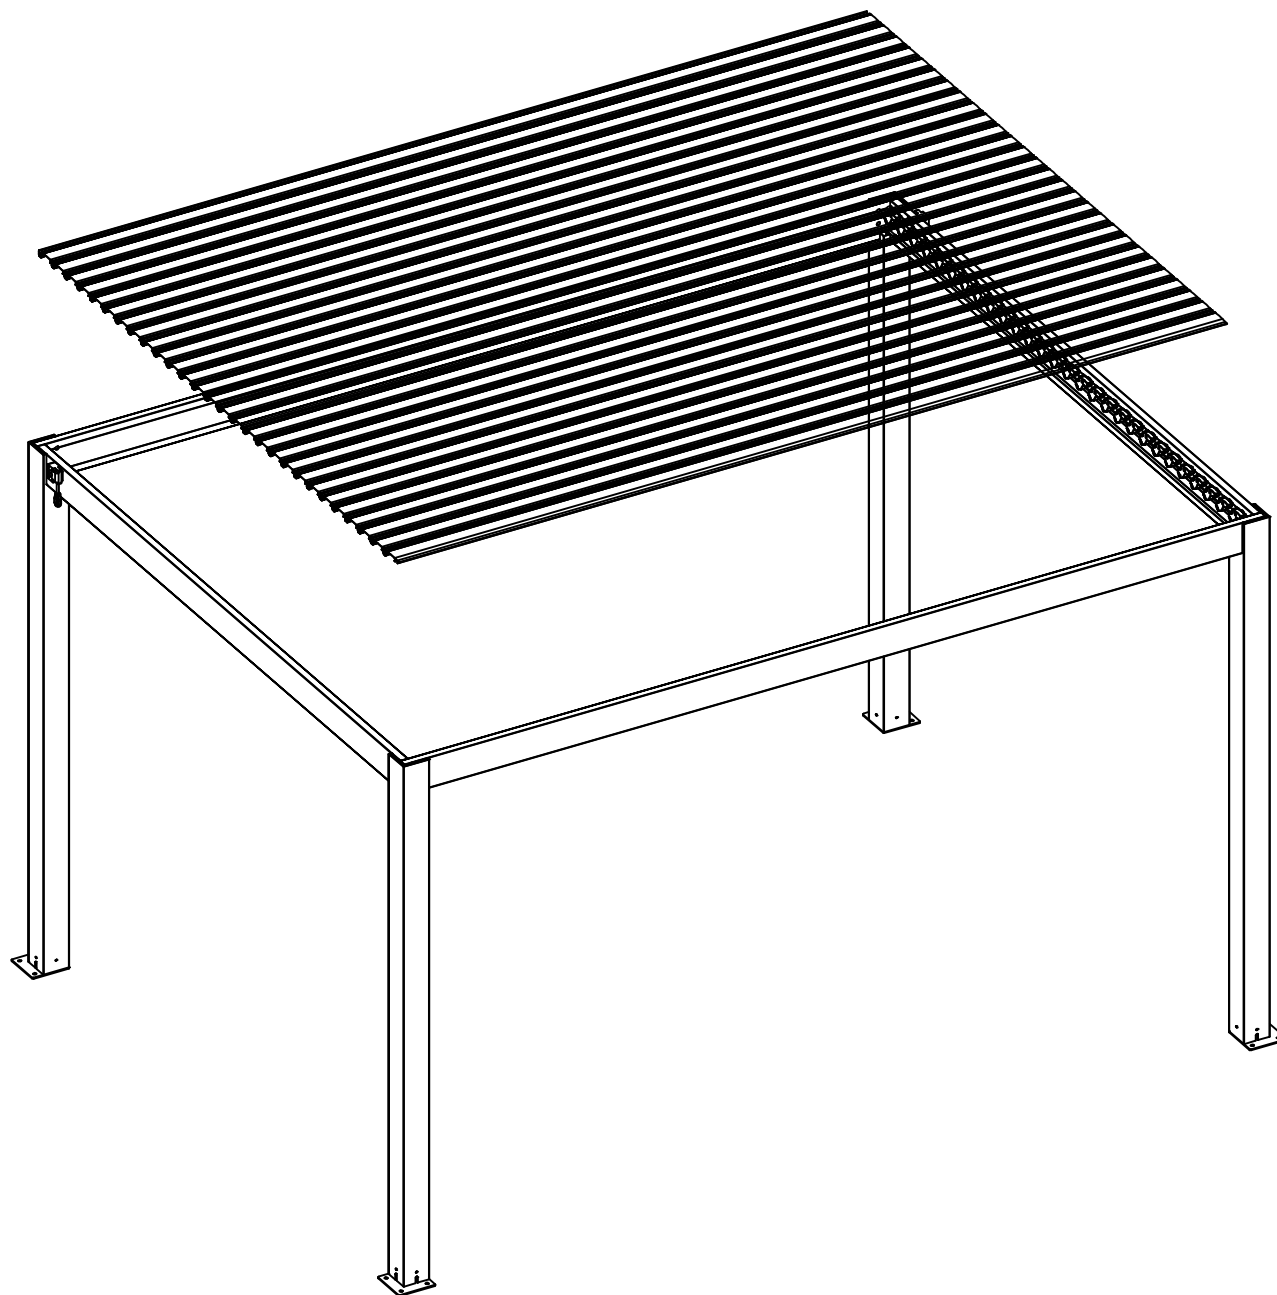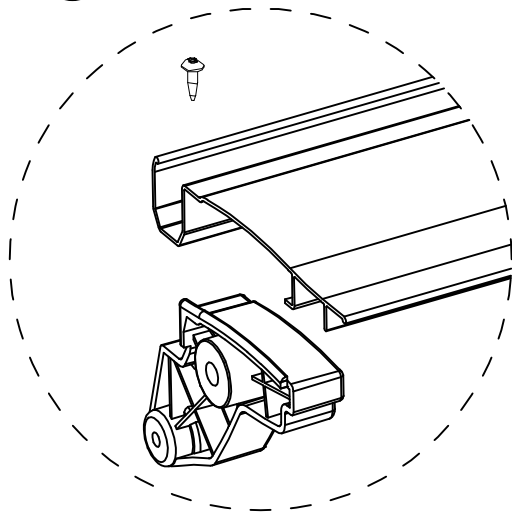

Step 4

Install the louvres No.5 in order, use bolts (M3.5*16mm) to fix left& right side.

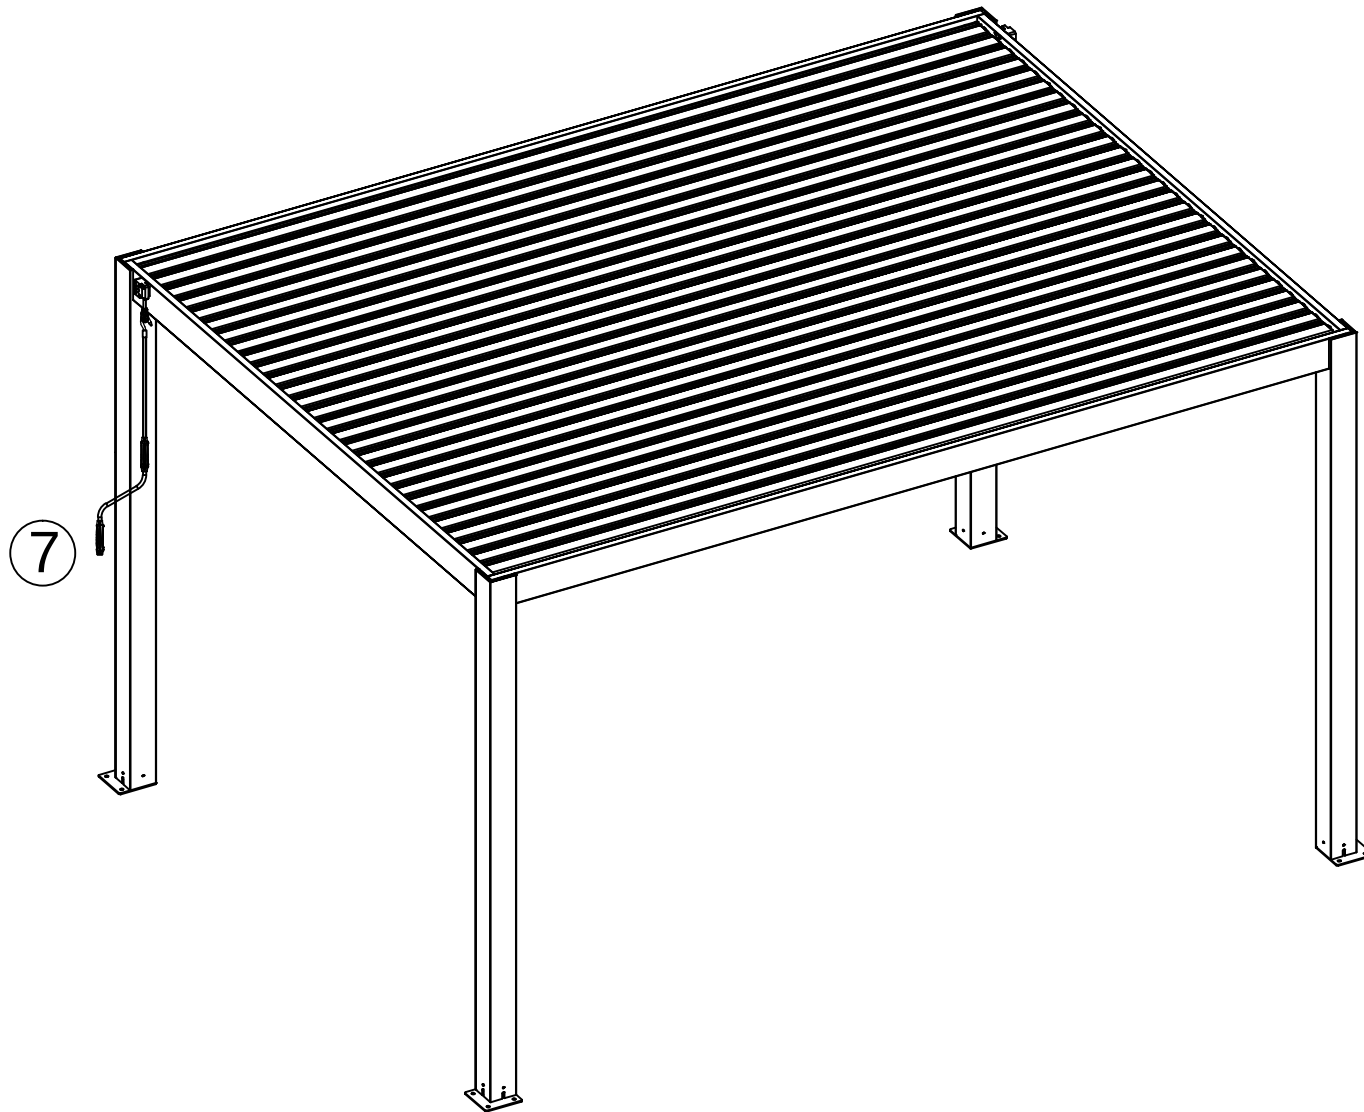

Step 5
Open and close the louvers with the hand crank rotating.